

Extension Name Setting

Description

Assigns names to the extensions.

**Selection**

- Jack number: **01 – 24**
- Name: **10 characters (max.)**

Default

All jacks – Not stored

Programming

1. Enter **604**.

Display: Extension Name

2. Press **NEXT**.

Display: Jack NO? →

3. Enter a **jack number**.

Pressing **NEXT** also can enter jack number 01.

Display: #01:

4. Enter a **name**.

For entering characters, see Section 4.1.3 “Entering Characters”.

To delete the current entry, press **CLEAR**.To change the current entry, press **CLEAR** and enter the new name.

5. Press **STORE**.

6. To program another jack, press **NEXT** or **PREV**, or **SELECT** and enter the desired **jack number**.

7. Repeat steps 4 through 6.

8. Press **END**.

Conditions

- There is a maximum of 24 names. Each name has a maximum of 10 characters.
- Program [009] “Extension Number Assignment” is used to assign the extension numbers.

Feature References

Section 3, Features

Display, Call Information

Display, in Idle

Intercom Calling