

*Date and Time Setting***Description**

Sets the current date and time.

**Selection**

- Year: 00 – 99
- Month: Jan. – Dec.
- Day: 1 – 31
- Day of the week: Sun / Mon / Tue / Wed / Thu / Fri / Sat
- Hour: 1 – 12
- Minute: 00 – 59
- AM / PM

**Default**

98 Jan. 1 Thu 12:00 AM

**Programming**

1. Enter 000.

Display: Date/Time Set

2. Press NEXT.

Display example: 98 Jan. 1 Thu

3. Enter the year.

To change the current entry, press CLEAR and enter the new year.

4. Press ➡.

5. Keep pressing SELECT until the desired month is displayed.

6. Press ➡.

7. Enter the day.

To change the current entry, press CLEAR and enter the new day.

8. Press ➡.

9. Keep pressing SELECT until the desired day of the week is displayed.

10. Press ➡.

Display example: 12:00 AM

11. Enter the hour.

To change the current entry, press CLEAR and enter the new hour.

12. Press ➡.

*Date and Time Setting (contd.)*

---

13. Enter the **minute**.

To change the current entry, press **CLEAR** and enter the new minute.

14. Press **➡** .

15. Press **SELECT** for AM or PM.

16. Press **➡** .

17. Press **STORE**.

18. Press **END**.

**Conditions**

- After changing an entry, the user can press **STORE**. It is not necessary to perform the rest of the steps.
- To return to a previous field, press **◀** in steps 4 through 16.
- If an alarm is heard after pressing **STORE**, check if the date is valid or not.
- The clock starts immediately after the **STORE** button is pressed.
- The operator and manager can set the date and time in the station programming mode.
- The system supports the years from 1998 to 2097. Setting 2098 and 2099 are not available.

**Feature Reference**

**Section 3, Features**  
Display, in Idle