

Voice Processing System

Panasonic

SUBSCRIBER'S GUIDE

*Read this manual before installing,
customizing, or operating the
Voice Processing System*

MODEL

KX-TVS75/KX-TVS100/KX-TVS200

Introduction

The Panasonic Voice Processing System (VPS) is a powerful tool used to manage your voice communications and increase your productivity through the use of your voice mailbox. As a subscriber (the owner of a VPS mailbox), you can:

- Send a message to one or more people inside or outside of your office.
- Transfer messages (with your annotation) to other VPS subscribers.
- Receive messages from any touch-tone telephone.
- Be called at an outside telephone or be notified through your beeper, when there are messages stored in your mailbox.
- Be notified by the message-waiting lamp on your extension that there are messages stored in your mailbox.
- Screen your calls.
- Automate the handling of callers.
- And more...

This guide is your reference to making the best use of your mailbox and the Voice Processing System.

How to Use This Manual


This Subscriber's Guide explains how to use the Voice Processing System (VPS) with any touch-tone telephone. Diagrams and notes accompany step-by-step descriptions of each VPS operation. Additionally, you are guided through each procedure by the voice prompts played as each step is performed.

Description

Describes the step-by-step actions that you must perform for each procedure.

➤ This symbol identifies important notes about the operation being described.

Menu Diagram

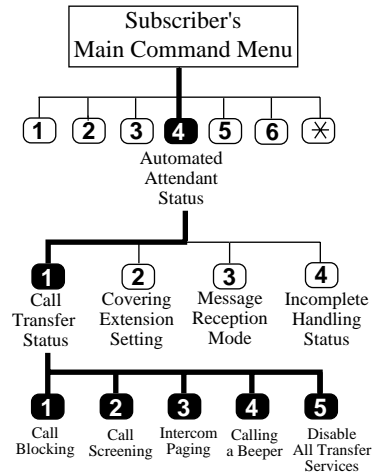

You will find a diagram in the left-hand corner of the first page of each procedure. The diagrams illustrate the menu path for each procedure. The bold lines and black keys indicate the path that you should take and the steps that must be performed.

Voice Prompts

*To set Call Transfer Status, Press [1]
To set up Covering Extension, Press [2]
To set Message reception Mode, Press [3]
To set Incomplete Handling Status, Press [4]*

The voice prompts for each step are shown in Italicized text.

Quick Reference

At the end of this guide is a flow-chart showing all VPS operations. The Quick Reference has been designed to serve as an at-a-glance guide to basic VPS operations.

Terms to Know

Subscriber

The owner of a VPS mailbox.

System Manager

The person who manages and maintains the Voice Processing System. The System Manager creates mailboxes and authorizes the use of some VPS features.

Getting Started

Numbers to Know

You must have the following information before you begin:

- The code assigned to your Voice Mail Service.
- Your mailbox and extension number.

-
- The System Manager's phone number.

Basic Steps

When using your mailbox for the first time, you must read Chapter 1: Mailbox Set Up and perform the key set up procedures described. You must customize your mailbox before sending or receiving messages.

Identify yourself as the owner of your mailbox by setting the following:

- Recording Personal Greetings
- Recording Your Name
- Setting Your Password

You may further customize your mailbox by setting any of the additional features:

- Call Transfer Status
- Covering Extension
- Incomplete Call Handling Status
- Message Reception Mode
- Notification by Calling

Table of Contents

1	Mailbox Set Up	
1.1	Logging in to Your Mailbox.....	8
1.2	Recording Personal Greetings.....	9
1.3	Setting, Changing, and Deleting Your Password	11
1.4	Recording Your Name.....	13
2	Receiving Messages	
2.1	Receiving Messages.....	16
2.2	Replying to Messages	18
2.3	Message Transfer	21
2.4	Erasing Messages.....	24
2.5	Accessing Your Mailbox from an Outside Telephone.....	25
3	Sending Messages	
3.1	Delivering Messages to Other Subscribers.....	28
3.2	Checking Mailbox Distribution.....	32
3.3	Setting up an External Message Delivery List	34
3.4	Sending External Delivery Message.....	37
3.5	Checking and Setting External Message Delivery Status	42
4	Special Features	
4.1	Call Transfer Status.....	46
4.2	Covering Extension.....	48
4.3	Incomplete Call Handling Status	50
4.4	Message Reception Mode.....	51
4.5	Personal Group Distribution Lists	52
4.6	Deleting Group Distribution Members.....	55
4.7	Deleting Group Distribution Lists.....	57
4.8	Message Waiting Notification	59
4.9	Interview Mailbox.....	63
4.10	Live Call Screening.....	66
4.11	Recording a Two-Way Conversation.....	67
	Appendix A Quick Reference	
A1	Subscriber.....	70
A2	Message Manager	71
A3	System Manager	72
	Glossary	

Section 1

Mailbox Set Up

This chapter describes the procedures for customizing your mailbox.

1.1 Logging in to Your Mailbox

➤ Before you can access Subscriber Services, you must first open your mail box.

1. Press the Intercom Button on the telephone keypad.
2. Dial the code assigned to the Voice Mail Service. Your code is_____.
3. To access your mailbox from another extension, go to Step 4.
To access your mailbox from your extension, go to Step 5.
4. If the system is set up to support multiple languages (up to three) you will hear a selection prompt:

*For English, Press [1].
For French, Press [2].
For Chinese, Press [3].*

5. Select the desired language (if applicable).

*You have _____new messages.
To Receive the Message, Press [1].
To Deliver a Message, Press [2].
To Check the Mailbox Distribution, Press [3].
For Automated Attendant Status, Press [4].
For Mailbox Management, Press [5].
For Other Features, Press [6].
To End this Call, Press [*].*

- a) Press the number representing the activity desired.

6. Select the desired language (if applicable) and Press [#] [6].


Please enter your party's mailbox number.

- a) Enter your mailbox number. Press [*] ____ ____.

Enter your password followed by the pound sign.

- b) Enter your password and Press [#].
 - c) When the main menu is played, select the feature that you desire.

1.2 Recording Personal Greetings

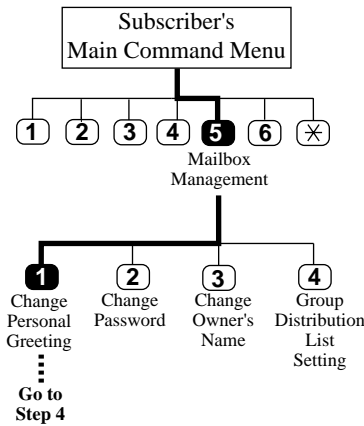

After reaching your mailbox, callers hear your personal greeting message(s). You are able to record three kinds of personal greetings: No Answer Greeting, Busy Greeting, and After Hours Greeting.

The VPS plays the appropriate message for each call.

1. Log in to your mailbox to access the Main Command Menu.
2. Press [5] for Mailbox Management.

*To change the personal greeting, Press [1].
 To change the password, Press [2].
 To change the owner's name, Press [3].
 To set the Group Distribution List, Press [4].*

3. Press [1] to record a personal greeting.

*To change the No Answer Greeting, Press [1].
 To change the Busy Signal Greeting, Press [2].
 To change the After Hours Greeting, Press [3].*

4. To record a greeting for the first time, go to Step 5.
 To change or erase a greeting, go to Step 6.
5. To record a greeting for the first time:
 - a) Press [1], [2], or [3].

*(No Answer) (Busy) or (After Hours) Greeting is not recorded.
 Record greeting at the tone.
 To end recording, Press [1].
 To pause and start recording, Press [2].*

- b)** Record the greeting at the tone and Press **[1]**.

*To review, Press [1].
To accept, Press [2].
To erase and try again, Press [3].
To add, Press [4].
To erase and exit, Press [*].*

- c)** Press **[2]** to accept the message recorded.

*Recording accepted.
To change the No Answer Greeting, Press [1].
To change the Busy Signal Greeting, Press [2].
To change the After Hours Greeting, Press [3].*

- 6.** To change or erase a greeting:

- a)** Press **[1]**, **[2]**, or **[3]** from the previous menu.

*(No Answer) (Busy) or (After Hours) Greeting is:
_____ (message played).
To change, Press [1].
To accept, Press [2].
To erase, Press [3].*

- b)** Press **[1]** to change the greeting.

*Record greeting at the tone.
To end recording, Press [1].
To pause and start recording, Press [2].*

- c)** Repeat Steps 5b and 5c.


- d)** Press **[2]** to accept the greeting without changes.

➤ When **[2]** is selected, the VPS will not state an accepted message.
The Mailbox Menu will be played.
Terminate the call at any time after Pressing **[2]**.

- e)** Press **[3]** to erase the greeting without re-recording.

Greeting erased.

1.3 Setting, Changing, and Deleting Your Password

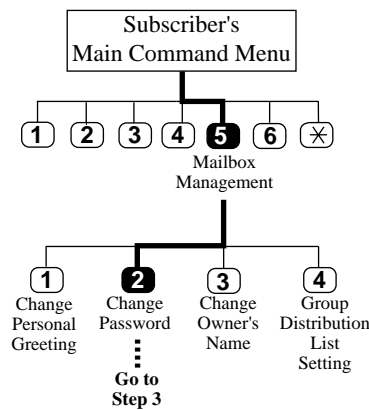

The VPS provides the option of assigning a password to your mailbox to protect the messages stored there from unauthorized access. A password should be no longer than eight digits (using the keys 0-9). You can change your password at any time. When setting your password, avoid using obvious number combinations. If you forget your password, have your System Manager delete it. You may set a new one after this has been done.

1. Log in to your mailbox to access the Main Command Menu.
2. Press [5] for Mailbox Management.

*To change the Personal Greeting, Press [1].
 To change the Password, Press [2].
 To change the Owner's Name, Press [3].
 To set the Group Distribution List, Press [4].*

3. To set a password for the first time, go to Step 4.
 To change an existing password, go to Step 5.
 To delete a password, go to Step 6.
4. Press [2] to enter the password for the first time.

*Password not assigned.
 Enter your password followed by the pound sign [#].*

- a) Enter the password and Press [#].

*Password is (password stated).
 To change, Press [1].
 To accept, Press [2].*

- b) Press [2] to accept the password.

5. Press [2] at the Mailbox Management Menu, to change an existing password.

*Password is (password stated).
To change, Press [1].
To accept, Press [2].*

- a) Press [1] to change the password.

*Enter your password followed by the pound sign [#].
To skip setting the password, Press the pound sign [#].*

- b) Enter the new password and Press [#].

*Password is (password stated).
To change, Press [1].
To accept, Press [2].*

- c) Press [2] to accept the new password entered.

6. Press [2] to delete an existing password (no password assigned).

*Password is (password stated).
To change, Press [1].
To accept, Press [2].*

- a) Press [1] to change the password.


*Enter your password followed by the pound sign [#].
To skip setting the password, Press [#].*

- b) Press [#] to delete the password.

*Password not assigned.
To change, Press [1].
To accept, Press [2].*

- c) Press [2] to accept the password as not assigned.

1.4 Recording Your Name

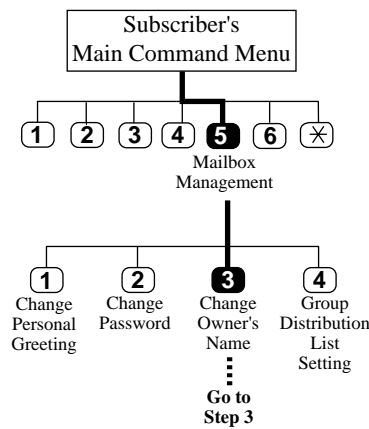

When callers reach your mailbox, they hear a recording. This recording alerts callers that they have reached the correct mailbox. In addition, when a caller does not know the mailbox number and specifies the mailbox by entering the first three or four letters of the owner's name, the VPS will announce a series of recorded names which the caller may select.

1. Log in to your mailbox to access the Main Command Menu.
2. Press [5] for Mailbox Management.

*To change the Personal Greeting, Press [1]
 To change the Password, Press [2].
 To change the Owner's Name, Press [3].
 To set the Group Distribution List, Press [4].*

3. To record the owner's name for the first time, go to Step 4.
 To change an existing owner's name, go to Step 5.
 To erase an existing owner's name, go to Step 6.

4. Press [3] to record the owner's name for the first time.

*Owner's name is not recorded.
 Record owner's name at the tone.*

- a) State your name at the tone.

*Owner's name is (name stated).
 To change, Press [1].
 To accept, Press [2].
 To erase, Press [3].*

b) Press [2] to accept the name.

5. Press [3] to change an existing owner's name.

*Owner's name is (name stated).
To change, Press [1].
To accept, Press [2].
To erase, Press [3].*

a) Press [1] to change the name.

Record owner's name at the tone.

b) Clearly state the name at the tone.

*Owner's name is (name stated).
To change, Press [1].
To accept, Press [2].
To erase, Press [3].*

c) Press [2] to accept the new name.

6. Press [3] to erase an existing owner's name.

*Owner's name is (name stated).
To change, Press [1].
To accept, Press [2].
To erase, Press [3].*

a) Press [3] to erase the owner's name.


Owner's name erased.

Section 2

Receiving Messages

This chapter explains how to access and manage received messages.

2.1 Receiving Messages

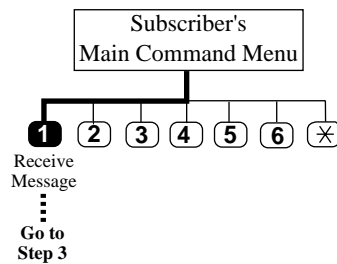

The VPS plays both the new and saved messages that are contained in your mailbox along with the date, time, and sender information that pertains to each message.

1. Log in the Main Command Menu.

*You have ____ new messages.
(Main Command Menu played)*

2. Press [1] to access the Receive Message Menu.

*You have ____ message(s).
New/Old Message (1st message played).
Message recorded on (date started) at (time stated).*

An abbreviated menu is played first:

*To repeat this message, Press [1].
To play the next message, Press [2].
To erase this message, Press [3].
To transfer this message, Press [7].
For Help, Press [0].*

Press [0] or wait and allow the full menu to be played.

*To repeat this message, Press [1].
To replay the previous message, Press [1] twice.
To play the next message, Press [2].
To erase this message, Press [3].
To reply to this message, Press [4].
To rewind, Press [5].
To fast forward, Press [6].
To transfer this message, Press [7].
To message scan, Press [8].*

3. Select the appropriate message option.

➤ **Repeat Messages**

- Press [1] to listen to the current message again.

➤ **Replaying the Previous Message**

- Press [1] twice while receiving a message to listen to the previous message.

➤ **Playing the Next Message**

- Press [2] while receiving a message to listen to the next message.

➤ **Erase**

- Press [3] after receiving a message to erase it. (See Erasing Messages)

➤ **Reply**

- Press [4] after receiving a message to send a reply. (See Replying to Messages)

➤ **Rewind**

- Press [5] after receiving a message to listen to it again.

➤ **Fast Forward**

- Press [6] while receiving a message to fast forward to the end.

➤ **Transfer**

- Press [7] after receiving a message to transfer it to another subscriber.
(See Message Transfer)

➤ **Scan**

- Press [8] to listen to the first four seconds of each message.

When all messages have been scanned, the following message and menu options will be played:

These are the brief segments of your messages.


To replay the previous message, Press [1].

To play the next message, Press [2].

To play the entire message, Press [3].

Option 3 - "To play the entire message," is only available once. Selecting this option a second time will erase the message.

2.2 Replying to Messages

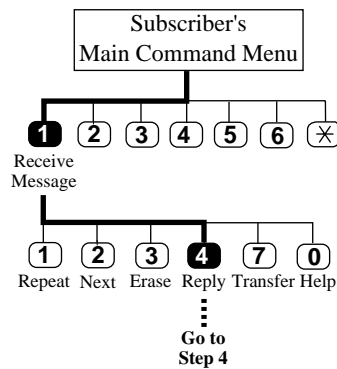

This feature allows you to reply to messages that have been sent by other subscribers through their mailboxes.

► This feature is only available when a message has been delivered through a Subscriber's mailbox.

1. Same as Receiving Messages.

2. Same as Receiving Messages.

3. Press [4] to reply to the message.

► When a message cannot be replied to you will hear this prompt:
"Sorry, you cannot reply. The message sender is unknown."

4. Press [2] to record a message.

*Please leave a message at the tone.
 To end recording, Press [1].
 To pause and restart recording, Press [2].
 (tone)*

► When paused, the recording must be restated within 20 seconds or the VPS will stop recording automatically.

a) Record the message and Press [1].

*To review, Press [1].
 To accept, Press [2].
 To erase and try again, Press [3].
 To add, Press [4].
 To erase and exit, Press [*].*

b) Press [2] to accept the message.

*Recording accepted.
To set delivery time or make this message private, Press [1].
To accept, Press [2].*

5. Press [1] to set delivery time.

*To set delivery time, Press [1].
For immediate delivery, Press [2].*

a) Press [1] to set delivery time (if desired).

*Enter the time followed by the pound sign.
For Hellp, Press [0].*

➤ For example: 5:00 is entered as [5] and [#]. 5:15 is entered as [515] [#].

b) Enter the time and Press [#].

Enter [1] for AM or [2] for PM.

c) Press [1] for AM or [2] for PM.

Enter day of the month followed by the pound sign.

6. Enter the day of the month and Press [#].


*This message will be delivered on (date stated) at (time stated).
To change, Press [1].
To accept, Press [2].*

a) Press [2] to accept the message.

*To make this message private, Press [1].
Otherwise, Press [2].*

7. Press [1] to make the message private or [2] to return to the main menu.

2.3 Message Transfer

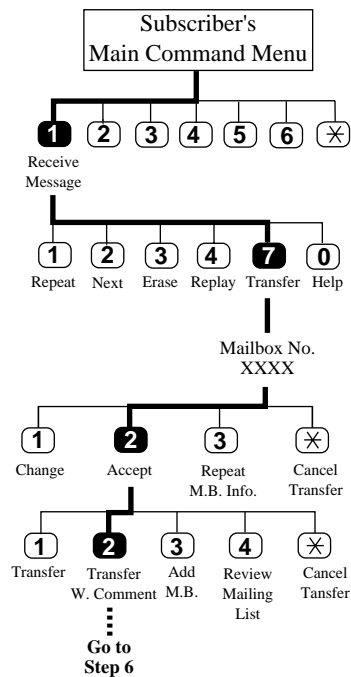

This function allows you to transfer messages to other mailboxes.

- If the message has been assigned as private, it cannot be transferred to other mailboxes.

1. Same as Receiving Messages.
2. Same as Receiving Messages.
3. Press [7] to transfer the message.

*Enter the destination mailbox number.
To enter by name, Press [#].*

4. Enter the mailbox of the intended recipient.

Option 1:

- a) Enter the mailbox number on the telephone keypad.

*Mailbox (mailbox number stated).
(Owner stated)
To change, Press [1].
To accept, Press [2].
To repeat, Press [3].*

- b) Press [2] to accept the mailbox number entered.

*To transfer, Press [1].
To transfer with comment, Press [2].
To add a new mailbox number, Press [3].
To review the mailing list, Press [4].*

Option 2:

- a) Press [#] and [1] to access the mailbox by name.

*Enter the first three or four letters of the person's last name.
For Q, Press [7].
For Z, Press [9].*

- b) Enter the first three or four letters of the person's last name.

*Mailbox (mailbox number stated).
(Owner stated)
To accept, Press [1].
For the next name, Press [2].
To repeat this name, Press [3].
To enter a new name or mailbox, Press [*].*

- c) Press [1] to accept the mailbox stated.

*To transfer, Press [1].
To transfer with comment, Press [2].
To add a new mailbox number, Press [3].
To review the mailing list, Press [4].*

5. Press [2] to transfer with comment.

*State your comment at the tone.
To end recording, Press [1].
To pause and restart recording, Press [2].
(tone)*

➤ When paused, the recording must be restated within 20 seconds or the VPS will stop recording automatically.


6. Record the message and Press [1].

To review, Press [1].
To accept, Press [2].
To erase and try again, Press [3].
To add, Press [4].
To erase and exit, Press [].*

7. Press [2] to accept the message and terminate the activity or make another selection from the Receive Message Menu.

➤ No acknowledgment will be given that the message has been transferred.

2.4 Erasing Messages

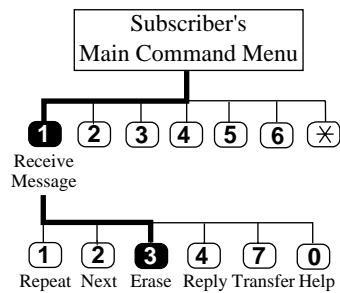

You can erase messages during playback. Erased messages cannot be recovered.

- The VPS will automatically erase messages after a specified number of days. Your System Manager controls the number of days that messages will be maintained.

1. Same as Receiving Messages.

2. Same as Receiving Messages.

3. Press [3] to erase messages.

- Messages are erased one at a time.

After a message is erased, you will hear the following prompt:

*The message erased.
To play the next message, press 2.*

If all messages have been erased, you will hear:

All messages erased.

2.5 Accessing Your Mailbox from an Outside Telephone

This procedure is used when checking your messages remotely or when replying to a message waiting notification call (by beeper or telephone).

1. Call the Voice Processing System from an outside telephone.
2. Select the appropriate language, if applicable.
3. Press [#] [6] (Important - Press Keys Slowly).

Please enter your party's mailbox number.

4. Enter your mailbox number. Press [*] ____ ____.

Enter your password followed by the pound sign.

5. Enter your password and Press [#].

*You have _____ new messages.
To Receive the Message, Press [1].
To Deliver a Message, Press [2].
To Check the Mailbox Distribution, Press [3].
For Automated Attendant Status, Press [4].
For Mailbox Management, Press [5].
For Other Features, Press [6].
To End this Call, Press [*].*


6. Press [1] to receive your messages.
7. Review your messages.
 - Press [#] [8] to access/call another extension.
 - Press [0] to reach the operator.
 - Press [#] [9] to exit the VPS.

Section 3

Sending Messages

This chapter tells you how to send messages, including recording and delivery.

3.1 Delivering Messages to Other Subscribers

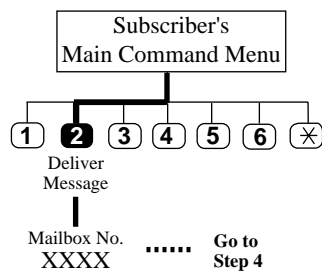

This feature is used when sending an identical message to several subscribers.

1. Log in to your mailbox to access the Main Command Menu.
2. Press [2] for Message Delivery.

*Enter your party's mailbox number.
To enter by name, Press [#] and [1].*

3. Enter the mailbox of the intended recipient.

► You can also specify a Personal or a System Group Distribution List instead of an individual mailbox by entering the number of the list followed by [#]. Personal Group Distribution Lists must be created before they can be used. To use a System Group Distribution List check with the System Manager to insure that a list exists within the VPS.

Option 1:

- a) Enter the mailbox number on the telephone keypad.

*Mailbox (mailbox number stated).
To change, Press [1].
To accept, Press [2].
To repeat, Press [3].*

- b) Press [2] to accept the mailbox number entered.

*To record a message, Press [1].
To add a new mailbox number, Press [2].
To review the mailing list, Press [3].*

Option 2:

- a) To enter the mailbox by name, Press [#] and [1].

*Enter the first three or four letters of the person's last name.
For Q, Press [7].
For Z, Press [9].*

- b) Enter the first three or four letters of the person's last name.

*Mailbox (mailbox number stated).
To accept, Press [1].
For the next name, Press [2].
To repeat this name, Press [3].
To enter a new name or mailbox, Press [*].*

- c) Press [1] to accept the mailbox stated.

*To record a message, Press [1].
To add a new mailbox number, Press [2].
To review the mailing list, Press [3].*

4. To record a message, go to Step 5.
To add a new mailbox number, go to Step 6.
To review the mailing list, go to Step 7.

5. Press [1] to record a message.

*Please leave a message at the tone.
To end recording, Press [1].
To pause and restart recording, Press [2].
(tone)*

➤ When paused, the recording must be restated within 20 seconds or the VPS will stop recording automatically.

- a) Record the message and Press [1].

*To review, Press [1].
To accept, Press [2].
To erase and try again, Press [3].
To add, Press [4].
To erase and exit, Press [*].*

- b)** Press [2] to accept the message.

*Recording accepted.
To set delivery time or make this message private, Press [1].
To accept, Press [2].*

➤ You can deliver your message immediately after recording by pressing [2].

- c)** Press [1] to set delivery time.

*To set delivery time, Press [1].
For immediate delivery, Press [2].*

- d)** Press [1] to set delivery time.

*Enter the time followed by [#].
For Help, Press [0]*

➤ For example: 5:00 is entered as [5] and [#]. 5:15 is entered as [515] [#].

- e)** Enter the time and Press [#].

Enter [1] for AM or [2] for PM.

- f)** Press [1] for AM or [2] for PM.

Enter day of the month followed by the pound sign.

- g)** Enter the day of the month and Press [#].

*This message will be delivered on (date stated) at (time stated).
To change, Press [1].
To accept, Press [2].*

h) Press [2] to accept the message.

*To make this message private, Press [1].
Otherwise, Press [2].*

i) Press [1] to make the message private, or [2] to return to the main menu.


6. Press [2] to add a new mailbox number, and repeat Step 3.

➤ You can specify a maximum of 20 mailboxes as destinations.

7. Press [3] to review the mailing list.

*Mailbox (mailbox number stated).
To record a message, Press [1].
To add a new mailbox number, Press [2].
To review the mailing list, Press [3].*

3.2 Checking Mailbox Distribution

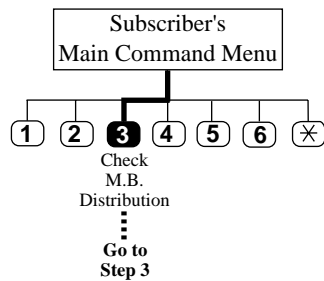

This function allows you to check the status of messages, which you have recorded in your mailbox for delivery to other mailboxes.

► You can check the delivery status of up to 84 message transmissions.

1. Log in to your mailbox to access the Main Command Menu.
2. Press [3] to check distribution status.

*(Number of messages stated) to verify.
Message received on (date stated).
At (time stated) for (mailbox number stated).
(Status of message - whether or not received, is stated).*

*To play this message, Press [1].
To check the previous message, Press [1] twice.
To check the next message, Press [2].
To cancel this message or verification, Press [3].*

3. Press [3] to cancel the message or delete verification.

*To delete distribution verification of this message, Press [1].
To cancel message delivery, Press [2].*


4. Press [1] to delete distribution verification of the first message stated.

*Verification deleted.
(Distribution status menu repeated).*

5. Press [2] to cancel message delivery.

*Message delivery canceled.
(Distribution status menu repeated).*

3.3 Setting up an External Message Delivery List

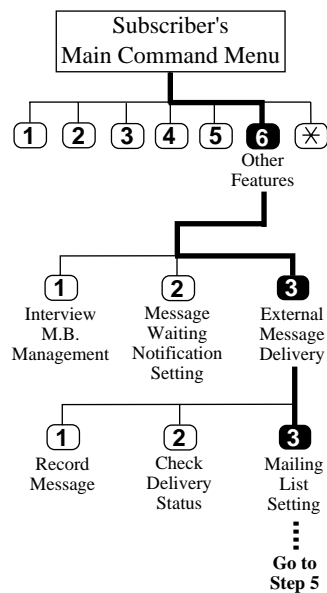

Setting up an External Message Delivery List lets you send the same message to several people outside of the system with a single operation. Up to two lists can be maintained at the same time, and each list can contain up to eight members.

➤ The System Manager must authorize this feature before it can be used.

1. Log in to your mailbox to access the Main Command Menu.
2. Press [6] for other features.

*For Interview Mailbox Management, Press [1].
To set up Message Waiting Notification, Press [2].
For External Message Delivery, Press [3].*

3. Press [3] for External Message Delivery.

*To record a message for external delivery, Press [1].
To check external delivery message status, Press [2].
To set up the mailing list, Press [3].*

4. Press [3] to set up the mailing list.

Enter delivery list number one or two.

5. Press [1] or [2] to choose the delivery list.

➤ Up to two delivery lists can be established.

*Delivery list number is (number selected is stated).
This group has no members (if members not entered).
To add a new member, Press [1].*

- 6.** Press [1] to add members to the list.

➤ Up to 8 members can be entered on each list.

*You can add up to (number of entries remaining) more members.
Any digit on the telephone keypad can be used.
Enter the telephone number and wait.
To insert a pause or special command, enter the partial number and wait for the options menu.*

- 7.** Enter the telephone number and wait.

*Telephone number is (telephone number stated).
To change, Press [1].
To accept, Press [2].
To review, Press [3].
To add more digits, Press [4].
To insert a pause, Press [5].
To set dial mode, Press [6].
To insert a wait for dial tone, Press [7].*

- 8.** Press [2] to accept the telephone number entered.

Record the recipient's name at the tone.

- 9.** Record the recipient's name and wait.

*Telephone number is (telephone number stated).
(Recipient's name stated)
To change, Press [1].
To add, Press [2].*

- 10.** Press [2] to add more members or to end.

*To add more members, Press [1].
To end, Press [2].*

11. Press [2] and hang-up to end this procedure. Press [1] to continue adding members, and repeat the procedure.

12. To delete members from the list, repeat Steps 1 through 5.

a) Press [2] to delete members from the list.

*To delete all group members, Press [1].
Otherwise, Press [2].*

b) Press [1] to delete all group members.

This group has no members.


c) Press [2] to delete individual group members.

*Telephone number is (telephone number stated).
(Recipient's name stated).
To delete, Press 1.
To play next, Press 2.*

d) Press [1] to delete.

Group member deleted.

3.4 Sending External Delivery Message

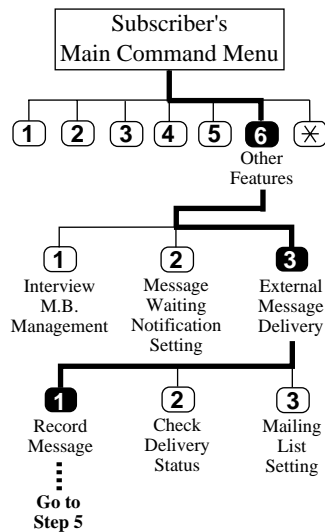

This feature is used to record and send external delivery messages.

► The System Manager must authorize this feature before it can be used.

1. Log in to your mailbox to access the Main Command Menu.
2. Press [6] for other features.

*For Interview Mailbox Management, Press [1].
To set up Message Waiting Notification, Press [2].
For External Message Delivery, Press [3].*

3. Press [3] for External Message Delivery.

*To record a message for external delivery, Press [1].
To check external delivery message status, Press [2].
To set up the mailing list, Press [3].*

4. Press [1] to record a message for external message delivery.

*To send to one recipient, Press [1].
To send by mailing list, Press [2].*

5. Press [1] to send to one recipient.

*Any digit on the telephone keypad can be used.
Enter the telephone number and wait.
To insert a pause or special command, enter the partial
number and wait.*

- a)** Enter the telephone number.

*Telephone number is (telephone number stated).
To change, Press [1].
To accept, Press [2].
To review, Press [3].*

- b)** Press [2] to accept the number.

*Enter the four digit password.
To skip setting the password, Press the pound sign.*

- c)** Enter a four digit password or Press [#].

Record recipients name at the tone.

- d)** Record the recipient's name at the tone.

*Enter the time followed by the pound sign.
To deliver now, press only the pound sign.
For help, Press [0].*

- e)** Enter the time and Press [#].

Enter [1] for AM or [2] for PM.

- f)** Press [1] for AM or [2] for PM.

Enter the day of the month followed by the pound sign.

- g)** Enter the day of the month and Press [#].

*Telephone number is (number stated).
Password is (password stated).
External delivery message scheduled for (recipient stated).
On (date) at (time stated).
To change the setting, Press [1].
To accept, Press [2].
To review, Press [3].*

h) Press [2] to accept.

*Please leave a message at the tone.
To end recording, Press [1].
To pause and start recording, Press [2].*

i) Record the message and Press [1].

*To review, Press [1].
To accept, Press [2].
To erase and try again, Press [3].
To add, Press [4].
To erase and exit Press [*].*

j) Press [2] to accept the message.

Recording accepted.

6. Press [2] to send by mailing list.

Enter delivery list number one or two.

a) Press [1] or [2] for desired list.

*Delivery list number is (list number stated).
Enter the four digit password.
To skip setting the password, Press the pound sign.*

b) Enter the four digit password.

Enter the time followed by the pound sign.

- c)** Enter the time and Press [#].

Enter [1] for AM or [2] for PM.

- d)** Press [1] for AM or [2] for PM.

Enter the day of the month followed by the pound sign.

- e)** Enter the day of the month and Press [#].

*Password is (password stated).
External delivery message scheduled on (date stated) at (time stated).
To change the setting, Press [1].
To accept, Press [2].
To review, Press [3].*

- f)** Press [2] to accept.

*Please leave a message at the tone.
To end recording, Press [1].
To pause and start recording, Press [2].*

- g)** Record the message and Press [1].

*To review, Press [1].
To accept, Press [2].
To erase and try again, Press [3].
To add, Press [4].
To erase and exit, Press [*].*

- h)** Press [2] to accept the message

Recording accepted.


► **Receiving External Delivery Messages**

1. Pick up a call from the VPS.
2. Press the number of the appropriate language, if available.
3. Press [1] to receive the message.
4. Enter the password that the sender assigned, if needed, and press [#].
Receiving the message will be disabled after an incorrect password is entered three times.
5. Press[*] to end the call.

► **Replying to External Delivery Messages**

1. Same as Receiving External Delivery Messages.
2. Same as Receiving External Delivery Messages.
3. Same as Receiving External Delivery Messages.
4. Same as Receiving External Delivery Messages.
5. Press [2] to reply to the message.
6. Record the message and press [1] to end recording.
7. Press [2] to accept.
8. Press [1] to make the message private.
Otherwise, press [2].

3.5 Checking and Setting External Message Delivery Status

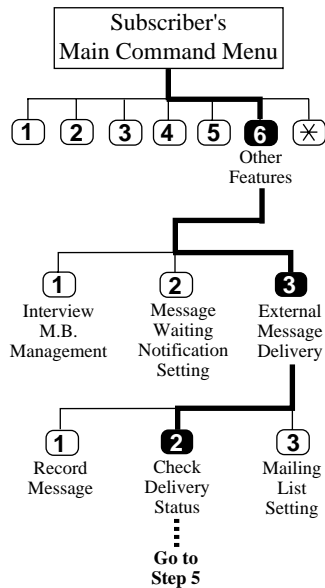

After recording external delivery messages, you can check the delivery schedule or review the recipients you specified. You can listen to this report only if the messages have not yet been delivered. After listening, you have the option of deleting messages or changing schedules.

► The System Manager must authorize this feature before it can be used.

1. Log in to your mailbox to access the Main Command Menu.
2. Press [6] for other features.

*For Interview Mailbox Management, Press [1].
To set up Message Waiting Notification, Press [2].
For External Message Delivery, Press [3].*

3. Press [3] for External Message Delivery.

*To record a message for external delivery, Press [1].
To check external delivery message status, Press [2].
To set up the mailing list, Press [3].*

4. Press [2] to check External Message Delivery status.

*External delivery message scheduled for (recipient stated) on
(date stated) at (time stated).
The message is (message stated).*

To reschedule, Press [1].
To play the next schedule, Press [2].
To repeat this schedule, Press [3].
To play the previous schedule, Press [4].


5. Press [1] to change the schedule or delete messages.
6. Press [1] to cancel external message delivery or Press [2] to change the time and date.

Section 4

Special Features

This chapter describes how to set up the special features available to your mailbox.

4.1 Call Transfer Status

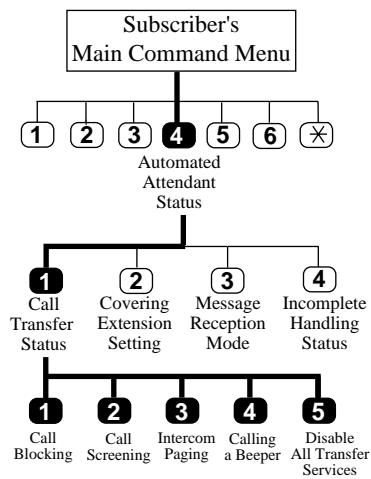

This feature is used to specify how the VPS should handle a call when a caller reaches your extension. The following options are available: Call Blocking, Call Screening, Intercom Paging, Calling a Beeper, or Disable All Transfer Services.

➤ The Intercom Paging feature is available only if your company is using a Panasonic KX-TD series telephone system.

1. Log in to your mailbox to access the Main Command Menu.
2. Press [4] for Automated Attendant Status.

*To set Call Transfer Status, Press [1].
 To set up Covering Extension, Press [2].
 To set Message Reception Mode, Press [3].
 To set Incomplete Handling Status, Press [4].*

3. Press [1] to set the Call Transfer Status.

*The Current Call Transfer Status is (current status is stated).
 To enable Call Blocking, Press [1].
 To enable Call Screening, Press [2].
 To enable Intercom Paging, Press [3].
 To enable Beeper Access, Press [4].
 To disable All Transfer Services, Press [5].*

4. Choose the option desired. Only one Call Transfer Status can be selected. A confirming message will be played after the selection has been made.

➤ **Call Blocking**

- Blocks all incoming calls to your extension.

➤ **Call Screening**

- Allows you to hear the caller's name before answering the call.

➤ **Intercom Paging**

- Pages you over the Intercom Paging System when the voice mail is holding or transferring a call for you.


➤ **Beeper Access**

- VPS will call you on your beeper when you have a message.
The beeper displays the caller's callback number on the LCD.

➤ **Disable All Transfer Services**

- Disables any transfer services previously selected.

4.2 Covering Extension

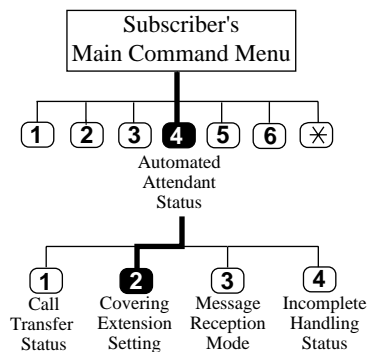

This feature allows calls to your extension to be transferred by the automated attendant to a covering extension. The covering extension also acts as a personal operator. When the caller presses [0] while in your mailbox, the call is transferred to the covering extension.

➤ Covering Extension Transfer must be enabled to use this feature.

1. Log in to your mailbox to access the Main Command Menu.

2. Press [4] for Automated Attendant Status.

*To set Call Transfer Status, Press [1].
 To set up Covering Extension, Press [2].
 To set Message Reception Mode, Press [3].
 To set Incomplete Handling Status, Press [4].*

3. To set up a covering extension, go to Step 4.

To change a previously assigned covering extension, go to Step 5.

4. Press [2] to set up a covering extension when one has not been previously assigned.

*Covering extension not assigned,
 Enter extension number.*

a) Enter the extension number.

*Covering extension is (assigned extension stated).
 To change, Press [1].
 To accept, Press [2].
 To delete, Press [3].*

b) Press [2] to accept the covering extension entered.

5. Press [1] to change a previously assigned covering extension.

*Covering extension is (assigned extension stated).
To change, Press [1].
To accept, Press [2].
To delete, Press [3].*

a) Press [1] to change the extension number.


Enter extension number.

b) Enter the new extension number.

*Covering extension is (covering extension stated).
To change, Press [1].
To accept, Press [2].
To delete, Press [3].*

c) Press [2] to accept the new covering extension number.

4.3 Incomplete Call Handling Status

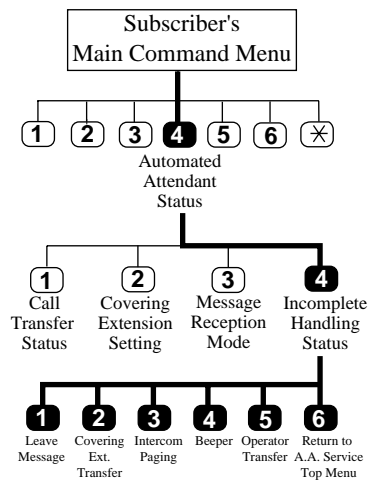

Calls are considered incomplete when there is no answer or if line is busy. The Incomplete Call Handling Status can be set for six options: (1) to record a message from the caller, (2) transfer the caller to a covering extension, (3) page the mailbox owner by intercom, (4) notify the mailbox owner via beeper, (5) transfer the caller to the operator, or (6) let the caller try another extension.

1. Log in to your mailbox to access the Main Command Menu.
2. Press [4] for Automated Attendant Status.


To set Call Transfer Status, Press [1].
To set up Covering Extension, Press [2].
To set Message Reception Mode, Press [3].
To set Incomplete Handling Status, Press [4].

3. Press [4] to set the Incomplete Handling Status.

To set Leaving a Message Status, Press [1].
To set Covering Extension Transfer Status, Press [2].
To set Intercom Paging Status, Press [3].
To set Beeper Access Status, Press [4].
To set Operator Transfer Status, Press [5].
To set Returning to Top Menu Automated Attendant Service Status, Press [6].

4. Press [1] to change or [2] to accept **after** selecting any of the above options.

4.4 Message Reception Mode

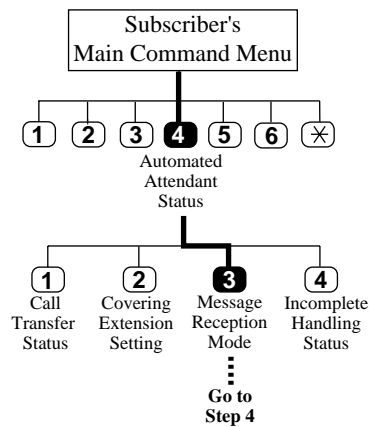

This feature is used to direct callers to either your regular or interview mailbox.

► All systems do not have an interview mailbox.

The system manager must assign an interview mailbox.

1. Log in to your mailbox to access the Main Command Menu.
2. Press [4] for Automated Attendant Status.


*To set Call Transfer Status, Press [1].
 To set up Covering Extension, Press [2].
 To set Message Reception Mode, Press [3].
 To set Incomplete Handling Status, Press [4].*

3. Press [3] to set the Message Reception Mode.

*Message Reception Mode is Message Recording Mode
 To change, Press [1].
 To accept, Press [2].*

4. Press [1] to change the current setting.
 (Interview Mode or Message Recording Mode)

4.5 Personal Group Distribution Lists

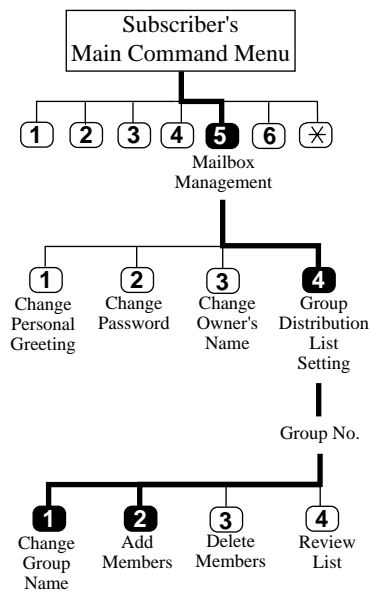

A Personal Group Distribution List is used to send the same message to several mailboxes in a single operation. Up to four lists can be maintained with each list containing up to twenty mailbox members.

1. Log in to your mailbox to access the Main Command Menu.
2. Press [5] for Mailbox Management.

*To change the personal greeting, Press [1].
 To change the password, Press [2].
 To change the owner's name, Press [3].
 To set the Group Distribution List, Press [4].*

3. Press [4] to set the Group Distribution List.

Enter a group number (1 through 4).

4. Enter a group number [1-4].

*Group number (group number stated).
 Group name not recorded.
 This group has no members.
 To change the group name, Press [1].
 To add group members, Press [2].*

- 5.** Press [1] to record a group name.

*Group name not recorded.
Record the group name at the tone.*

- a)** Clearly state the group name at the tone.

*(The group name is stated)
To change, Press [1].
To accept, Press [2].
To erase, Press [3].*

- b)** Press [2] to accept the name entered.

*To change the group name, Press [1].
To add group members, Press [2].*

- 6.** Press [2] to add group members.

*You can add up to ____ more members.
Enter the mailbox number.*

- a)** Enter the mailbox number of the first member.

*(The mailbox number and name are stated)
To change, Press [1].
To add, Press [2].*

- b)** Press [2] to add the number to the list.

*To add more numbers, Press [1].
To end, Press [2].*

- c)** Press [1] to add more numbers.

*You can add up to ____ more members.
Enter the mailbox number.*

- d)** Enter the mailbox number of the next member.


(The mailbox number and name are stated)
To change, Press [1].
To add, Press [2].

- e)** Press [2] to add the mailbox entered to the list.

To add more numbers, Press [1].
To end, Press [2].

- f)** Continue adding more members or end the procedure by Pressing [2].

4.6 Deleting Group Distribution Members

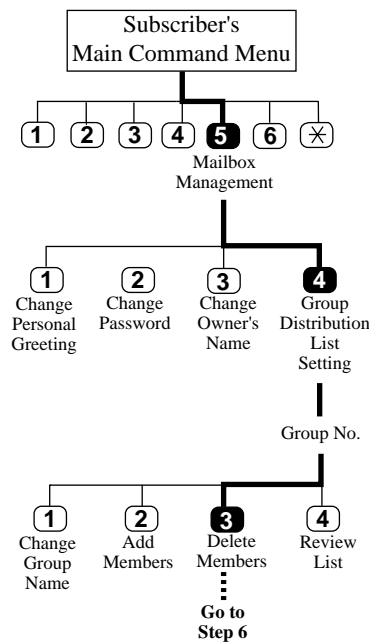

This feature is used to delete members from a Group Distribution List. Members can be deleted individually or they can all be deleted at the same time.

1. Log in to your mailbox to access the Main Command Menu.
2. Press [5] for Mailbox Management.
3. Press [4] to set the Group Distribution List.

Enter a group distribution number 1 through 4.

4. Enter the group number [1-4].

*Group number (number stated) (group name stated).
Mailbox (1st mailbox number stated) (mailbox name stated).
Mailbox (2nd mailbox number stated) (mailbox name stated).
(Remaining mailbox numbers and names stated until number list is complete).*

*To change the group name, Press [1].
To add group members, Press [2].
To delete group members, Press [3].
To review this group, Press [4].*

5. Press [3] to delete group members.

*To delete all group members, Press [1].
Otherwise Press [2].*

6. Press [1] to delete all group members.

*This group has no members.
To change the group name, Press [1].
To add group members, Press [2].*

➤ To end the procedure at this point, hang-up the phone or Press the SP-Phone button if on Intercom.

7. Press [2] to delete individual mailboxes from the distribution list.


*Mailbox (1st mailbox number stated) (group name stated).
To delete, Press [1].
To play the next, Press [2].
(Message and menu choices repeated for each mailbox.)*

- a) Press [1] to delete the stated mailbox.

Group member deleted.

- b) Repeat this procedure until all desired members have been deleted.

4.7 Deleting Group Distribution Lists

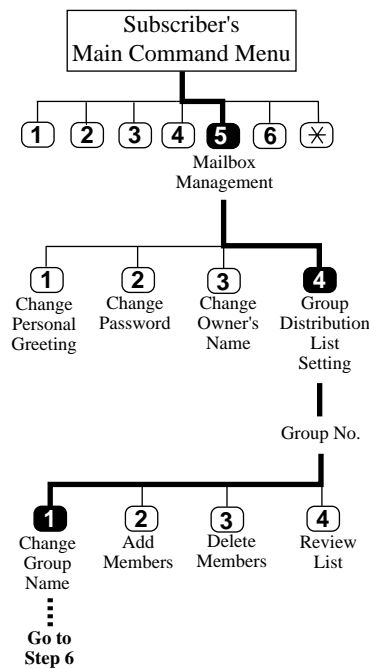

This feature is used to delete a group distribution list.

► To delete a group distribution list, first delete all group members. (See Deleting Group Distribution Members.)

1. Log in to your mailbox to access the Main Command Menu.
2. Press [5] for Mailbox Management.
3. Press [4] to set the Group Distribution List.

Enter a group distribution number 1 through 4.

4. Enter a group number [1-4].

*This group has no members.
To change the group name, Press [1].
To add group members, Press [2].
To delete group members, Press [3].
To review this group, Press [4].*


5. Press [1] to delete the group name.

(Group name stated).
To change, Press [1].
To accept, Press [2].
To erase, Press [3].

- 6.** Press **[3]** to erase the group name.

Group name erased.

4.8 Message Waiting Notification

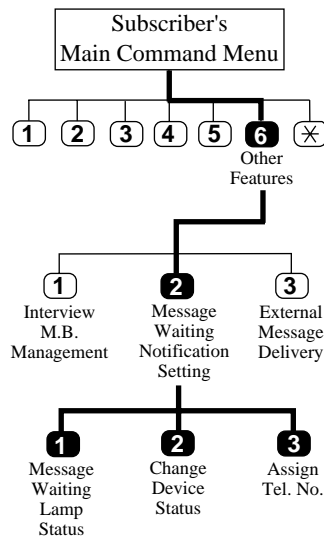

The VPS is able to signal you when a new message has been recorded in your mailbox. Each of three devices can be used -- the message waiting lamp, a telephone, or a beeper. You can assign time frames to each of these devices.

The VPS is also able to notify your beeper with the callback number of the party who left the message. The telephone number stored on the VPS for your beeper must include the beeper display command.

Three features can be set for message waiting notification; Message Waiting Lamp Status, Change Device Status, and Assign Telephone Number. These features can be set by the System Manager or at the local phone. Each device has its own phone number that must be entered.

➤ Message Waiting Lamp Notification Setting

- The VPS illuminates the message waiting lamp of your extension when a new message is recorded in your mailbox.

➤ Setting Device Status

- For each device, the notification can be enabled, disabled, or enabled to a preset schedule. Setting notification to a preset schedule can only be established by the System Administrator.

➤ Notification Number Assignment

- You can set up to three telephone or beeper numbers to ring when you wish to receive notification calls (Requires authorization from your System Manager).

1. Log in to your mailbox to access the Main Command Menu.

2. Press [6] for Other Features.

*For Interview Mailbox Management, Press [1].
To set up Message Waiting Notification, Press [2].
For External Message Delivery, Press [3].*

3. Press [2] to set Message Waiting Notification.

*To change the Message Waiting Lamp Status, Press [1]
To change the Device Status, Press [2].
To Assign Telephone or Beeper Numbers, Press [3].*

4. To change the Message Waiting Lamp Status, go to Step 5.
To change the Device Status, go to Step 6.
To Assign Telephone or Beeper Numbers, go to Step 8.

5. Press [1] to change Message Waiting Lamp Status.

*Message Waiting Lamp Notification (status stated - enabled
or disabled).
To change, Press [1].
To accept, Press [2].*

► **Caution:** Changing an enabled status (message waiting light will illuminate when message received) will disable (turn off) the message waiting light.

- a) Press [1] to change from enabled to disabled or from disabled to enabled.

*Message Waiting Lamp Notification (status stated - enabled
or disabled).
To change, Press [1].
To accept, Press [2].*

- b) Press [2] to accept the change.

6. Press [2] to set the device status.

Enter device number one through three.

- a) Enter the device number.

*Device number is (device number stated).
(Device status stated).
To use for scheduling, Press [1].
To use continuously, Press [2].
To use not at all, Press [3].*

- b) Select the status.

(The status selected is repeated)

7. To assign telephone or beeper numbers, go to Step 8.
To delete an existing telephone number, go to Step 9.
To change an existing telephone number, go to Step 10.

8. Press [3] to assign telephone or beeper numbers.

*To change the first telephone number, Press [1].
To change the second telephone number, Press [2].
To change the third telephone number, Press [3].*

- a) Press [1], [2], or [3] to enter a telephone number for the first time.

*(1st, 2nd, etc.) telephone number is not assigned.
Any digit on the telephone keypad can be used. Enter the
telephone number and wait. To insert a pause or special
command, enter the partial number and wait for the options
menu.*

- b) Enter the telephone number at the completion of the previous message. Press [9] or a **line access code** (contact your System Manager if you do not know your code) [1][**area code** - if needed] [**seven digit telephone number**].

- Enter a pause by entering the telephone number up to the point where the pause must be placed and wait.
The options menu will played - Press [5] to enter a pause.
The options menu will be played again.
Press [4] to add more digits then complete entry of the telephone number.

*Telephone number is (number entered is stated).
To change, Press [1].
To accept, Press [2].
To review, Press [3].
To add more digits, Press [4].
To insert a pause, Press [5].
To set dial mode, Press [6].
To insert a wait for dial tone, Press [7].
To insert a beeper display command, Press [8].*

- c) Press [2] to accept the number entered.

*For notification by telephone, Press [1].
For notification by beeper, Press [2].*

- d)** Press [1] or [2] for telephone or beeper notification.

I'll notify by (beeper or telephone).

- 9.** Press [1], [2], or [3] to delete an existing telephone number.

*(1st, 2nd, etc.) telephone number is (number stated).
To change, Press [1].
To accept, Press [2].
To delete, Press [3].*

- a)** Press [3] to delete the number selected.

Telephone number deleted.


- 10.** Press [1], [2], or [3] to change an existing telephone number.

*(1st, 2nd, etc.) telephone number is (number stated).
To change, Press [1].
To accept, Press [2].
To delete, Press [3].*

- a)** Press [1] to change the number selected.

- b)** Repeat Step 8 to enter the new number(s).

4.9 Interview Mailbox

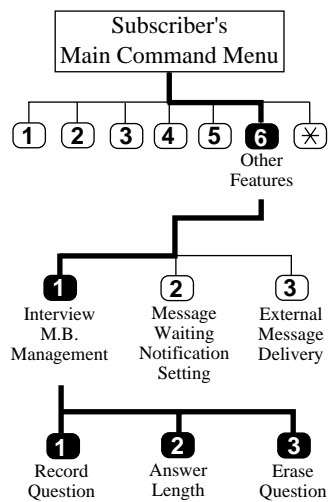

An Interview Mailbox plays prerecorded questions to callers and records their answers. You can record up to ten questions and set the answer lengths from four to thirty-two seconds. The answers are recorded and stored, in order, in your mailbox. The answer length must be set and questions must be recorded.

► This feature must be assigned by your System Manager.

1. Log in to your mailbox to access the Main Command Menu.
2. Press [6] for Other Features.

*For Interview Mailbox Management, Press [1].
To set up Message Waiting Notification, Press [2].
For External Message Delivery, Press [3].*

3. Press [1] for Interview Mailbox Management.

*To record the question, Press [1].
To set the answer length, Press [2].
To erase the question, Press [3].*

4. To record questions, go to Step 5.
To set answer length, go to Step 6.
To erase a question, go to Step 7.
5. Press [1] to record interview questions.

*(No question recorded) or Question # (first question stated).
To change this question, Press [1].
To go to the next question, Press [2].
To skip to the previous question, Press [3].
To go directly to a question, Press [4].*

- a)** Press [1] to record the first question.

*Record the question at the tone.
To end recording, Press [1].
To pause and restart recording, Press [2].*

- b)** Record the question and Press [1] to end recording.

*To review, Press [1].
To accept, Press [2].
To erase and try again, Press [3].
To add, Press [4].
To erase and exit, Press [*].*

- c)** Repeat Steps 5a to 5b until all questions have been recorded.

- 6.** Press [2] to set answer length.

*(No question recorded) or Question # (first question stated).
Answer length is (answer length stated).
To change the answer length, Press [1].
To skip to the next question, Press [2].
To skip to the previous question, Press [3].
To go directly to a question, Press [4].*

- a)** Press [1] to change the answer length.

*For 4 seconds, Press [1].
For 8 seconds, Press [2].
For 16 seconds, Press [3].
For 32 seconds, Press [4].*

- b)** Select the answer length desired.

*Answer length is (answer length stated).
To change the answer length, Press [1].
To skip to the next question, Press [2].
To skip to the previous question, Press [3].
To go directly to a question, Press [4].*

c) Repeat the process for each question.

7. Press [3] to erase questions.

*(No question recorded) or Question # (first question stated).
To erase this question, Press [1].
To skip to the next question, Press [2].
To skip to the previous question, Press [3].
To go directly to a question, Press [4].*

a) Press [1] to erase the question.

*Question erased.
The VPS plays the next question.*

b) Repeat this step for all questions to be erased.

4.10 Live Call Screening

By assigning one of your telephone keys to this feature, you can monitor incoming calls that have been forwarded to the Voice Mail Service.

When in the Hands-Free Mode, you can monitor the incoming call through the telephone's built-in speaker. You can speak with the caller by picking up the handset.

When in the Private Mode, you can monitor the incoming call through the handset after you hear the notification tone. You can speak with the caller by pressing the feature key or you can stop listening to the message by replacing the handset.

- This feature is available only if your company is using a Panasonic KX-TD series telephone system and if the System Administrator has provided your extension with this feature.
- For detailed information concerning this feature, please refer to the Installation Manual or the Panasonic KX-TD series telephone system.

4.11 Recording a Two-Way Conversation

By assigning one of the function keys on your telephone to this feature, you can record the conversation that you are having.

You must always notify the other party before you begin recording.

- This feature is available to you only if your company is using a Panasonic KX-TD series telephone system and if the System Administrator has provided your extension with this feature.

Appendix A

Quick Reference

A1 Subscriber

KX-TVS75, KX-TVS100, KX-TVS200

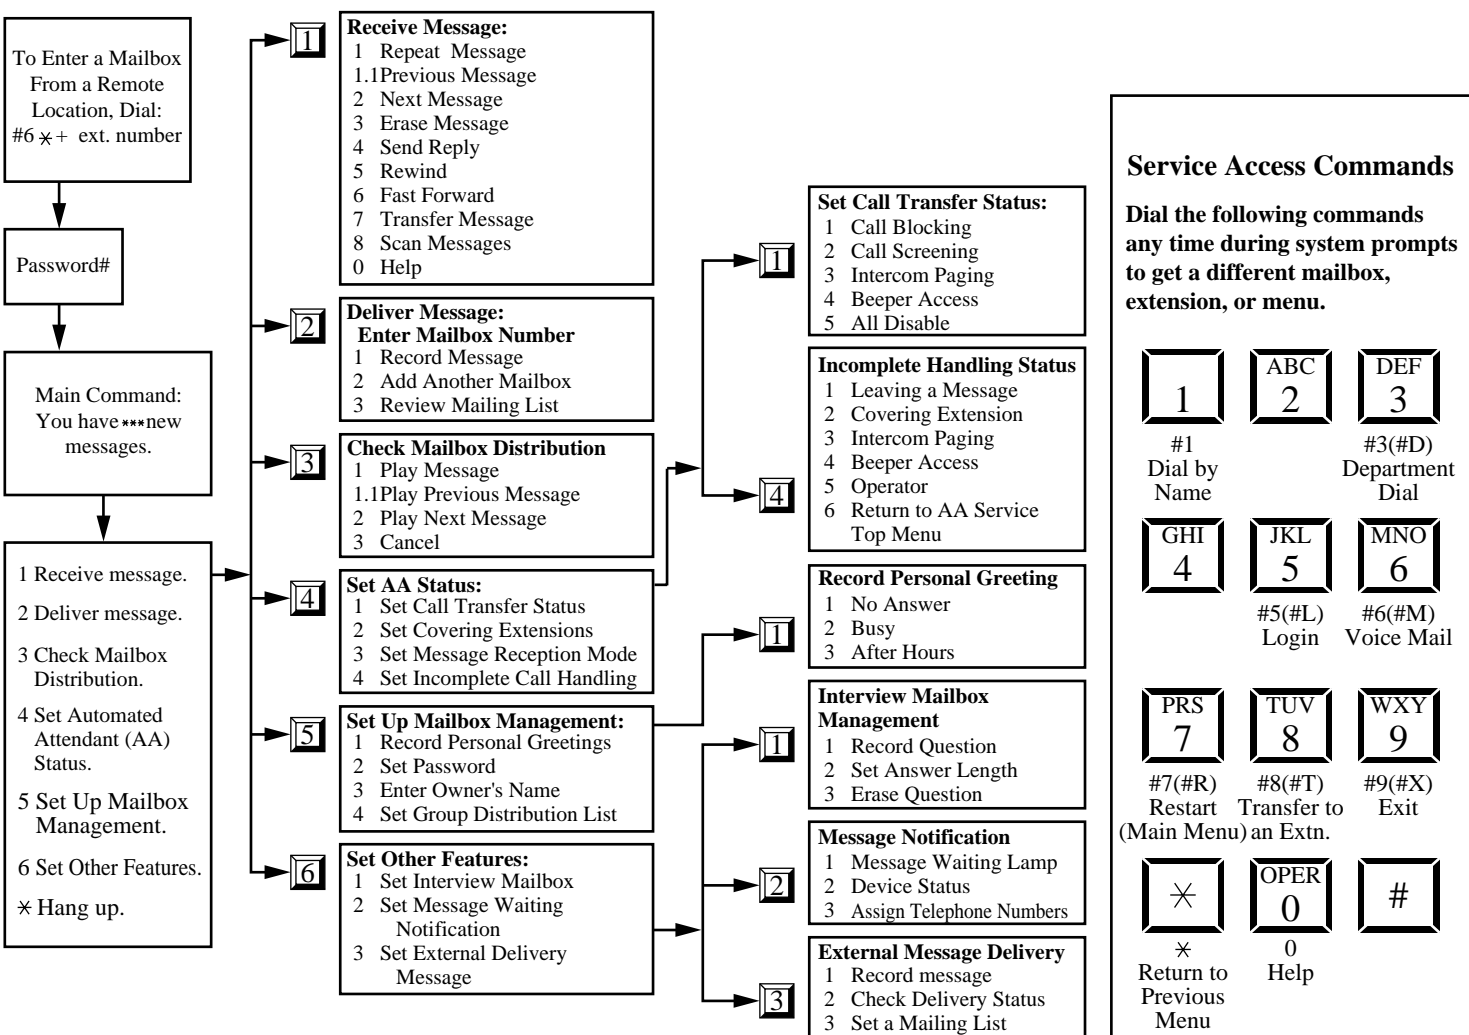


Figure 1:

A2 Message Manager

Service Access Commands

Dial the following commands any time during system prompts to get a different mailbox, extension, or menu.

<div>1</div> <div>#1</div> <div>Dial by Name</div>	<div>ABC2</div> <div>#3(#D)</div> <div>Department Dial</div>	<div>DEF3</div> <div>#3(#D)</div> <div>Department Dial</div>
<div>GHI4</div> <div>#5(#L)</div> <div>Login</div>	<div>JKL5</div> <div>#6(#M)</div> <div>Voice Mail</div>	<div>MNO6</div> <div>#6(#M)</div> <div>Voice Mail</div>
<div>PRS7</div> <div>#7(#R)</div> <div>Restart (Main Menu)</div>	<div>TUV8</div> <div>#8(#T)</div> <div>Transfer to an Extn.</div>	<div>WXY9</div> <div>#9(#X)</div> <div>Exit</div>
<div>✖</div> <div>*</div> <div>Return to Previous Menu</div>	<div>OPER0</div> <div>0</div> <div>Help</div>	<div>#</div>

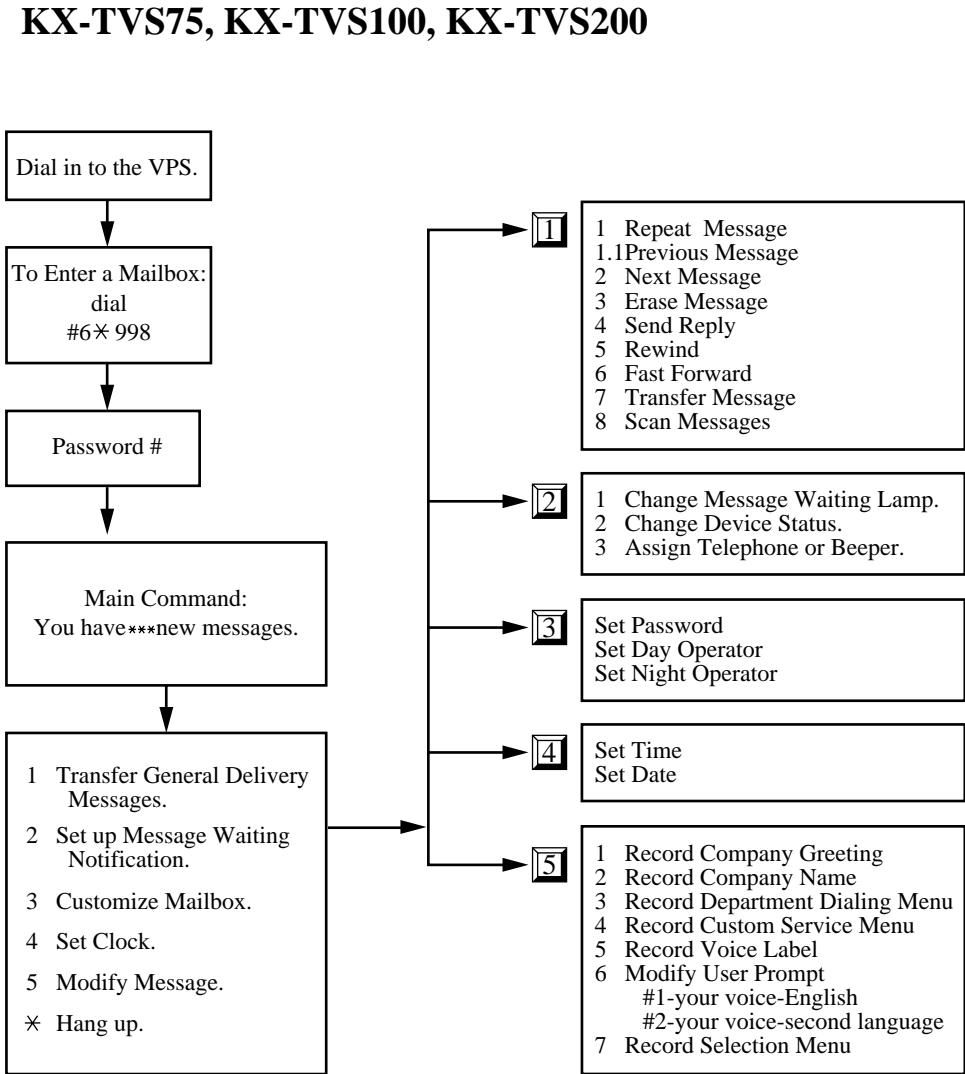


Figure 2:

A3 System Manager

KX-TVS75, KX-TVS100, KX-TVS200

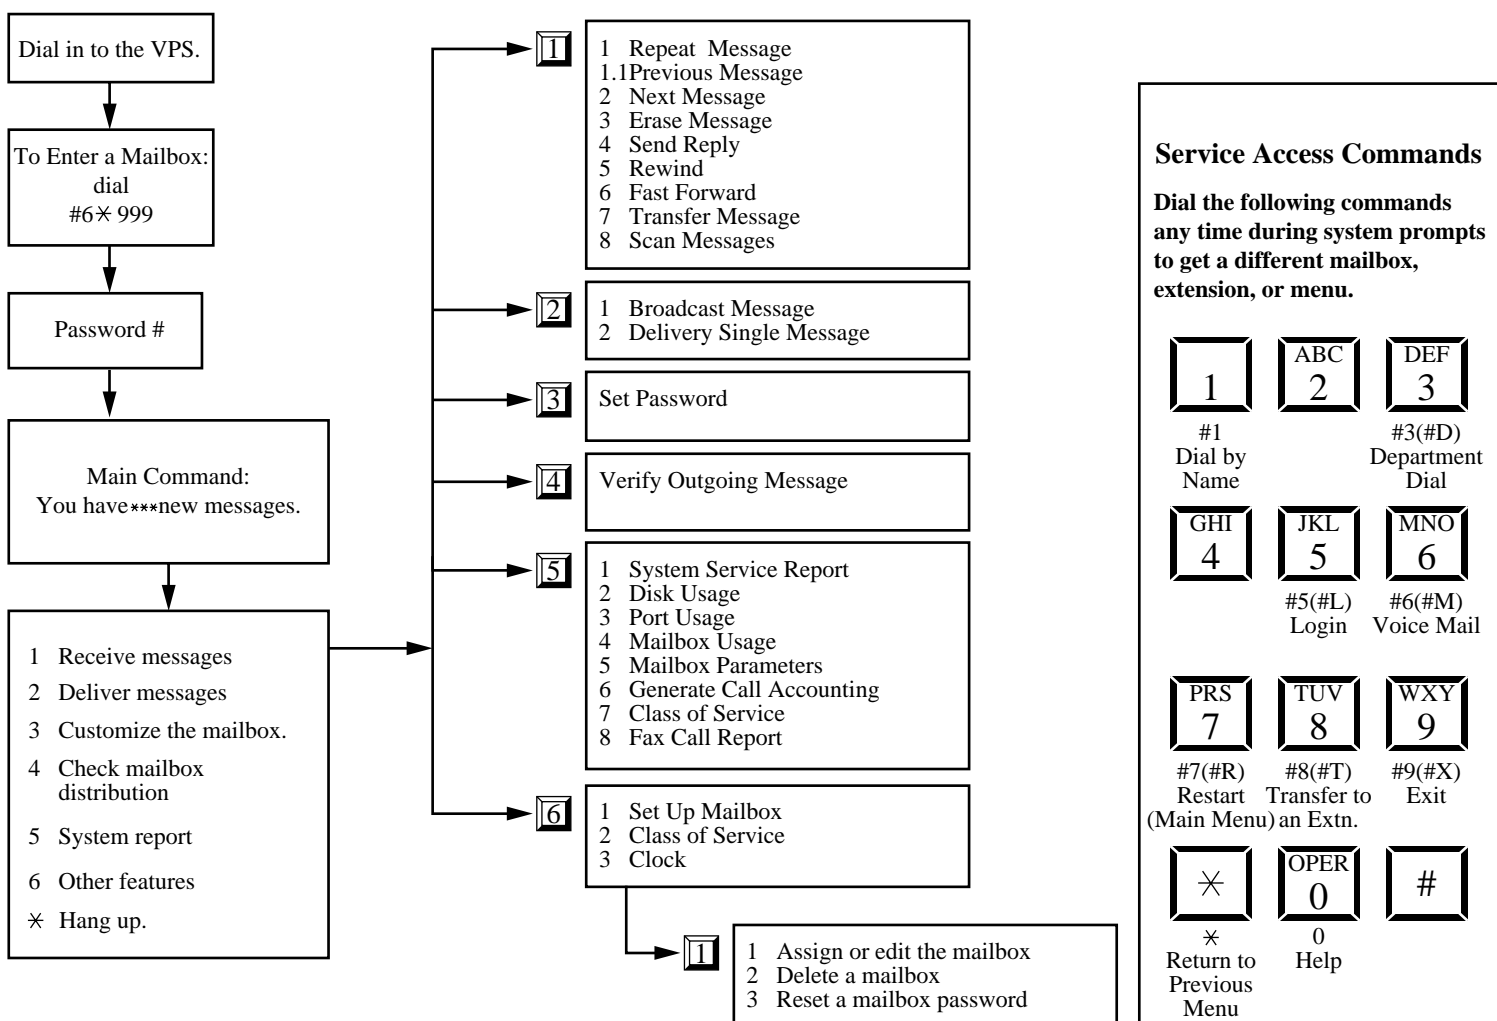


Figure 3:

Glossary

Auto Configuration

(Available with D-PITS Integration only.) The VPS can automatically draw information from the KX-TD816-1, the KX-TD1232, the KX-TD1232-1, the KX-TD500 or the KX-TD308. This saves time in the initial setup.

Auto Forwarding

Allows unretrieved messages to be copied or forwarded to another mailbox.

Automated Attendant

An electronic operator capable of transferring a caller to an extension or mailbox.

Call Blocking

Connects the caller to the Incomplete Call Service without ringing the subscriber's extension.

Call Duration

The maximum time allowed for an external message that is to be delivered by the VPS, specified by the subscriber.

Call Progress Tone

A tone sent from the switch to tell the caller the progress of the call (e.g. audible ring, reorder, busy, timing, etc.)

Call Screening

Allows subscribers to screen calls; the caller hears the message: "Please state your name." The VPS records the caller's name, then puts the caller on hold to play the name for the subscriber who decides whether or not to take the call.

Call Transfer

Transfers a call to the requested destination or to an alternate extension.

Called Party ID

(Sometimes referred to as Follow-On ID) Allows the VPS to dial extra digits to bring the caller directly to a specified mailbox, rather than to the General Delivery Mailbox.

Circular Hunting

A search of all extensions in a hunt group to find an open line. For example, if a hunt group includes 241, 242, 243, and 244, if 243 is busy, the system goes to 244, 241, then 242, until it finds a free extension.

Company Greeting

A short greeting that is played prior to the Custom Service Greeting: "Thank you for calling (Your Company Name)."

Company Greeting Mode

Determines which greeting is played (day, night, or holiday).

Custom Service Setting

Allows one-touch access to extensions, other custom service groups, ring groups, mail boxes, etc. A greeting can be recorded for each of the 100 groups to give verbal directions to the non-subscriber.

Default Setting

A parameter which was defined for the system at the factory and can be changed through system programming; i.e. the System Administrator or the System Manager.

Delayed Ring

When using D-PITS, use intercept routing to set delayed ringing to the VPS.

Delivery Time

The time specified by the subscriber for the VPS to deliver a prerecorded message.

Department Dialing

A number (0-9) assigned to transfer an outside caller to a specific extension.

Direct Mailbox Access

(Available with D-PITS Integration only.) Provides subscribers mailbox access by dialing the first port of the VPS from a telephone connected to a mailbox.

D-PITS Integration

Digital integration between the KX-TD816-1, the KX- TD1232, the KX-TD1232-1, the KX-TD500 or the KX-TD308 and the VPS.

Requires upgraded software in the telephone switch.

DTMF

(Dual Tone Multi Frequency) Commonly referred to as touch tone.

External Call Forwarding

(Available on the KX-TD816-1, the KX-TD1232-1, the KX-TD500 and the KX-TD308)
Forwards calls to an extension that has call forwarding activated to an outside phone.

External Delivery Message

A message intended for automatic delivery to a party outside of the company.

External Message Delivery Redial

Allows the subscriber, when making an external delivery, to instruct the VPS to make a maximum of 9 retries when the line is busy or there is no answer.

Fast Forward

Puts the user four seconds ahead in the current message.

Floating Extn. Number

See Logical Extension.

Follow-On ID

See Called Party ID.

Help

A VPS prompt used in the Utility Command in System Administration that gives the options.

Immediate Reply

Allows the message receiver to reply to a message without specifying the extension number of the sender.

Inband Signaling

The Follow-On ID (or Caller ID) that integrated the VPS and the telephone switch. Uses intercom paths to light message wait light. Does not give "high end" features such as: Intercom Paging, Two-Way Recording, Live Call Screening, etc.

Incomplete Call Handling Service

A variety of options given to the outside caller by the VPS when the dialed party is away from or using the phone (e.g. hold, call transfer).

Integration

Required between the VPS and the telephone switch. See Inband signaling and D-PITS Integration.

Intercept Routing No Answer

When a call is not answered, it can be transferred to another extension, or to the VPS.

Intercom Paging

(Available with D-PITS Integration only.) Allows up to 8 different paging groups. An outside party can reach a subscriber who is away from his/her telephone using either internal or external page groups.

Interview Service

A special type of subscriber mailbox enabling the subscriber to record up to 10 questions. After the questions are recorded the light is turned on at the subscriber position. (Good for claims departments, order desks, job applications, etc.)

Keypad

All touch-tone keys on the telephone.

LCD

Liquid crystal display.

Live Call Screening

(Available with D-PITS Integration only.) The proprietary telephone works like an answering machine.

The subscriber can hear the caller through the speaker phone while the message is being recorded.

Load

Loads information saved on a personal computer or floppy back to the VPS.

Logical Extension

(Sometimes referred to as Floation Extension Number or Virtual Extension) Doesn't go to an actual telephone extension; used for paging devices, mailboxes without telephones, amplifiers connected to paging ports, etc.

Mailbox Capacity (messages)

The number of messages that can be recorded in a subscriber's mailbox; should be set between 5 and 100 messages by the System Administrator.

Mailbox Capacity (recording time)

The total amount of time for messages in a subscriber's mailbox; should be set between 5 and 100 minutes by the System Administrator.

Mailbox Extension

Normally the same number as the telephone extension number.

Mailbox Management

Allows a subscriber to alter the setting for personal mailboxes.

Menu

A list of choices from which the user can select by using the telephone keypad or the keys from a personal computer.

Message Manager

(Mailbox 998) The person who takes care of the general delivery messages, records company greetings, custom service greetings and changes the original voice prompts. Limited system programming capabilities.

Message Retention Time

The amount of time the system will store a message before deleting or forwarding the message.

Message Retrieval Order

The order in which the subscriber retrieves messages: Last In First Out (LIFO) or First In First Out (FIFO).

Message Transfer

Allows a subscriber to reroute a message to another mailbox unless the message was marked "private." Additional comments can be added to this message.

Message Waiting Lamp

Light on proprietary telephones that is lit when there are messages in the mailbox.

Message Waiting Notification

The VPS notifies the subscriber of messages; notification method is set by the System Manager.

Notification options: message waiting lamp, external telephone or a digital pager.

Non-Subscriber

A caller to the VPS who does not own a mailbox.

Notification Method

(See Message Waiting Notification.) The subscriber is contacted by the VPS via a message waiting lamp, an outside call, or a pager.

Operator

Up to three destinations can be assigned as an operator. This is the extension that receives calls when the calling party is on a rotary phone or dials [0].

Owner's Name

The subscriber records his/her name in the mailbox. This is used for intercom paging and "dial by name."

Password

A number chosen by a subscriber or a manager to protect access to the mailbox.

Personal Greeting

Each mailbox owner can record a personal greeting.

Personal Group Distribution List

Each subscriber can have four distribution lists containing up to 20 mailboxes in each list. Used to send the same message to a variety of people.

PITS Programming

(Proprietary Integrated Telephone System) Programming via the telephone.

Port

The point of connection between the telephone switch and the VPS.

Pound Sign

The [#] key on the telephone keypad.

Private Message

A message which is delivered to a specific mailbox, that cannot be forwarded and can be password protected.

Prompt

A prerecorded list of options or a guidance message played to the user. The English system prompts are prerecorded at the factory and can be changed. Up to two other languages can be recorded as user prompts.

Review

Plays back a message.

Rewind

Replays the last four seconds of a message.

Rotary Telephone

A telephone capable of pulse dial only. Callers using a rotary telephone will be automatically forwarded to the operator or the general delivery mailbox.

Save

Command used to save system and user parameters and prompts to a personal computer or floppy disk.

Scanning Messages

Allows the subscriber to listen to only the first four seconds of each message. Another method is to use the digit [2] while listening to a message; this advises the VPS to skip to the next message.

Subscriber

A person who has an assigned mailbox.

System Administration

System programming from a personal computer.

System Group Distribution List

A list of subscribers held in the VPS for use by subscribers wishing to make group deliveries. Each group can have up to 20 members.

System Manager

(Mailbox 999) The person in charge of VPS system programming via a telephone.

System Report

A statistical report available through keyboard operation to the system administrator or the system manager.

System Usage Report

Gives statistical data on a variety of VPS usages, (e.g. disk usage, mailbox usage, etc.)

Two-way Recording

(Available with D-PITS Integration only.) Allows a subscriber to record a conversation into his/her mailbox.

Two-Way Transfer

(Available with D-PITS Integration only.) Allows a subscriber to record a conversation into another person's mailbox.

Virtual Extension

See Logical Extension.

Voice Mail

A general term used for messages recorded digitally over the phone from one person to another.

Voice Mail Button

(Available with D-PITS Integration only.) Allows one touch access to the voice mail box. Subscriber can use a function or a CO key.

Voice Prompt

Recorded VPS instructions to callers. These are either system prompts or user prompts.

VPS

Voice Processing System (e.g. Panasonic KX-TVS75, KX-TVS100 and KX-TVS200).

**Panasonic Consumer Electronics
Company, Division of Matsushita
Electric Corporation of America**

One Panasonic Way, Secaucus,
New Jersey 07094

**Panasonic Sales Company ("PSC"),
Division of Matsushita Electric of
Puerto Rico, Inc.**

Ave. 65 de Infantería, Km. 9.5,
San Gabriel Industrial Park, Carolina,
Puerto Rico 00985

Copyright:

This manual is copyrighted by Kyushu Matsushita Electric Co., Ltd. (KME). Under the copyrihgt laws, this manual may not be reproduced in any form, in whole or part, without the prior written consent of KME and its licensee.

© Kyushu Matsushita Electric Co., Ltd. 1999

Printed in Japan

PSQX1738YA KK0399CM1079